

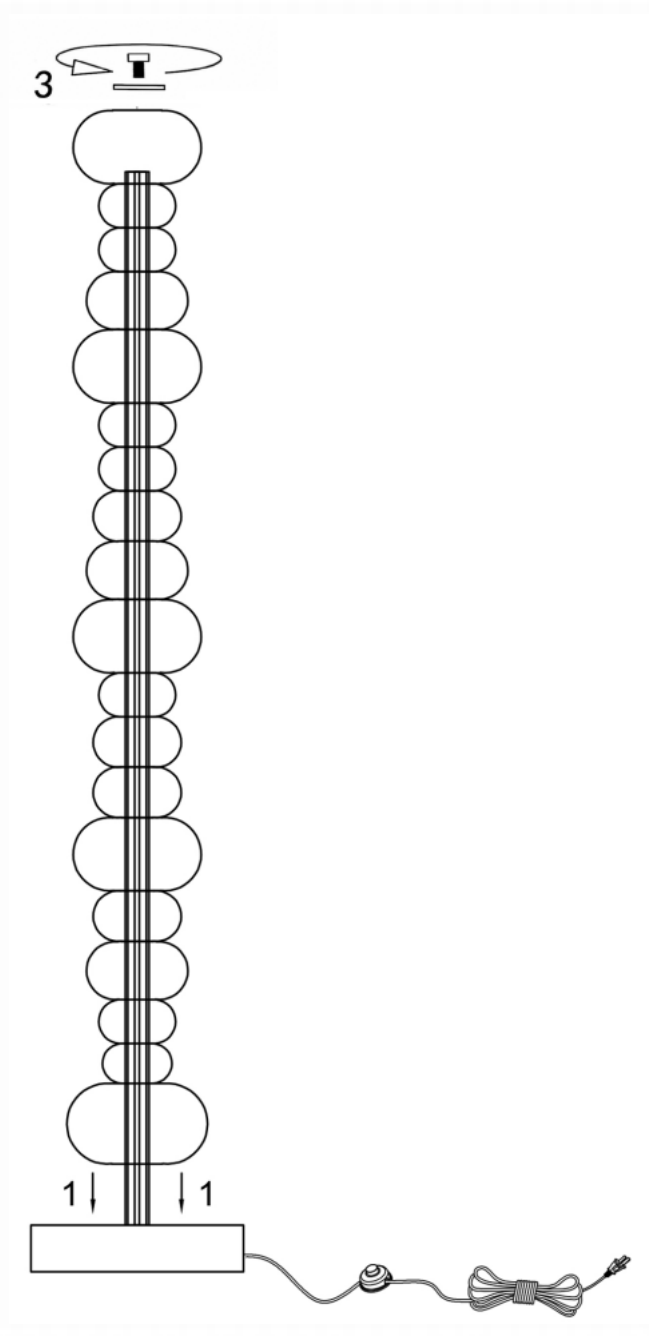


# INSTALLATION GUIDE - WW7012

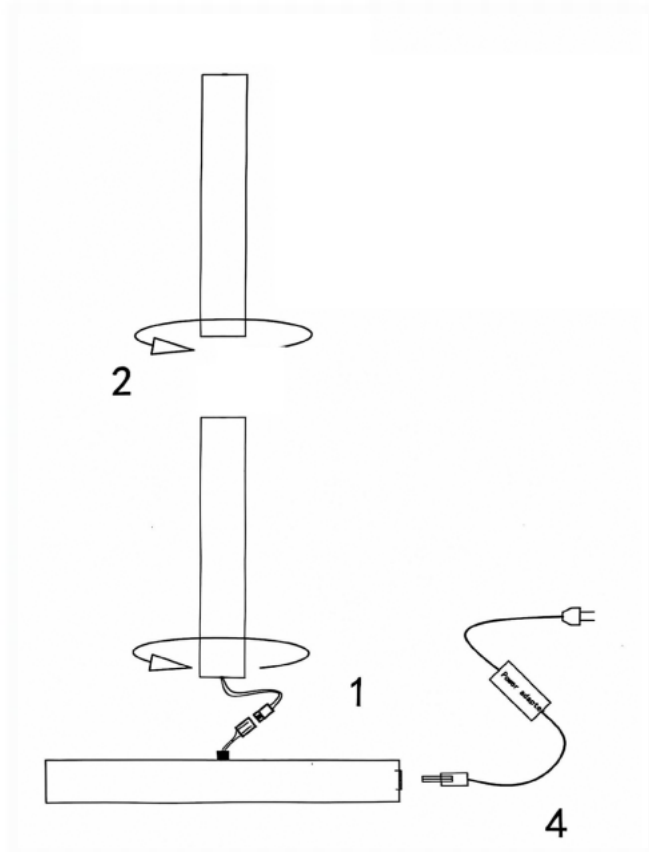

# INSTALLATION GUIDE - WW7012

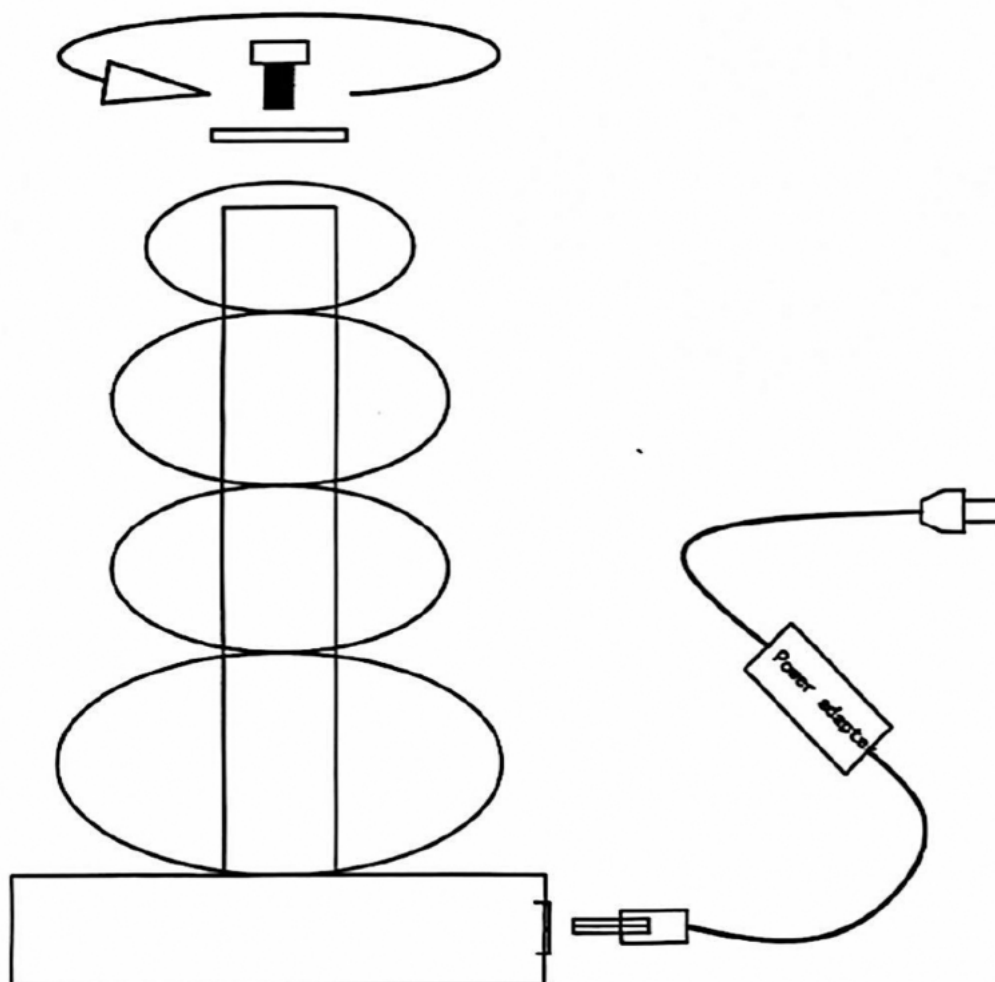

1. Screw the light rod down into the base
2. Put every lampshade down along the light rods.
3. Secure the flat cover on the top of the light rod with a screw.
4. Turn the power back on and flip on the light switch to test your light.