

## INSTALLATION GUIDE - WOW9000

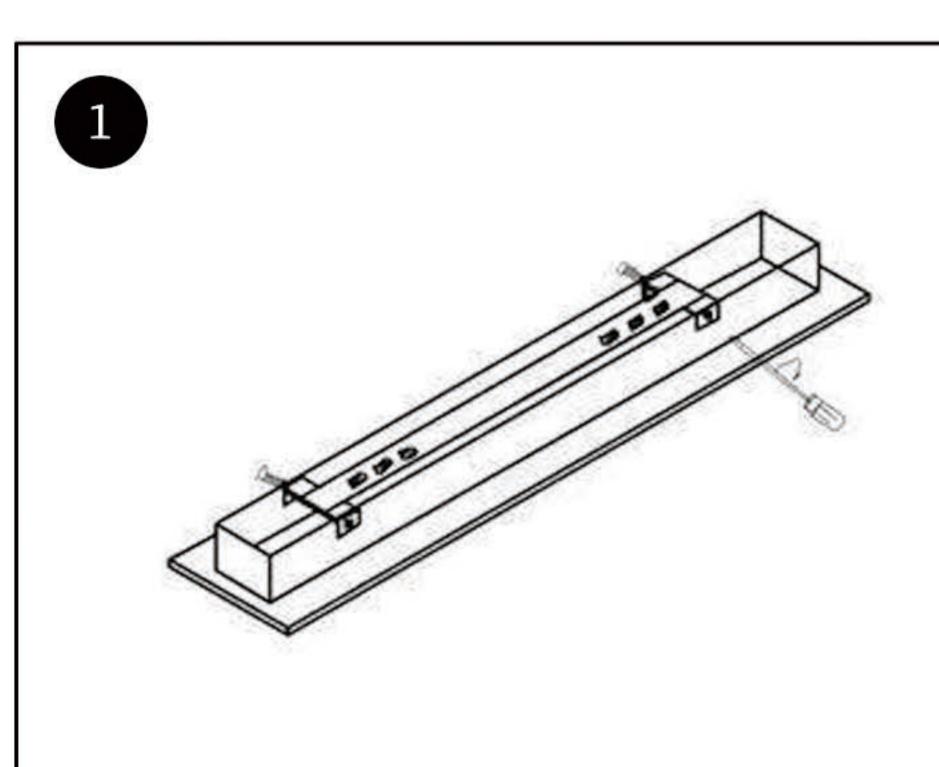


2

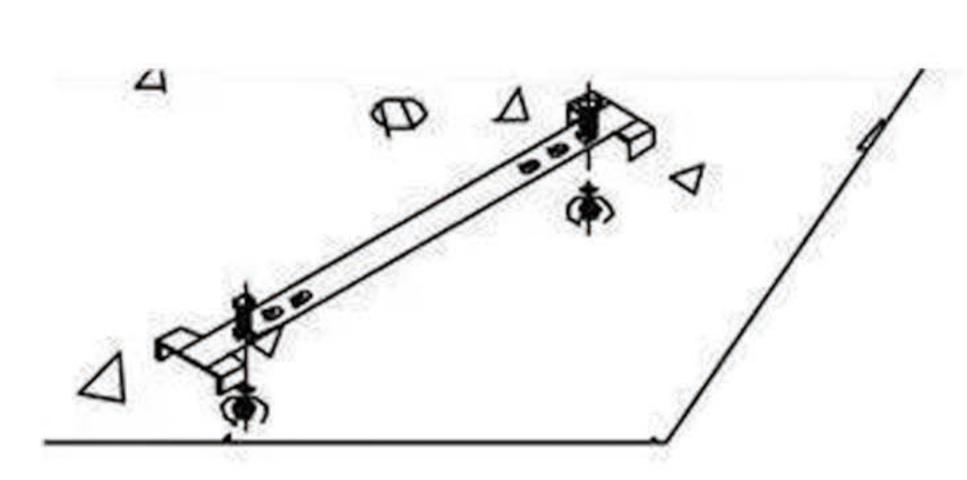


1. Detach the mounting bracket from the light through removing the screws.

2. Use the wire connector to connect the wires of the light to the reserved wires according to labels on the wires led panel.



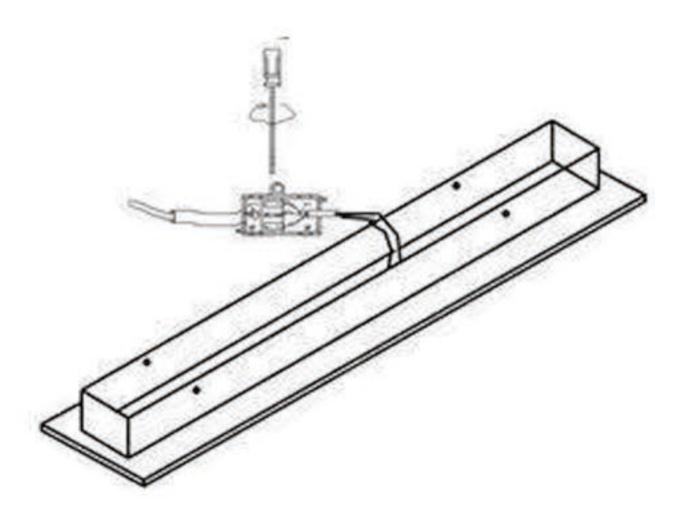


4

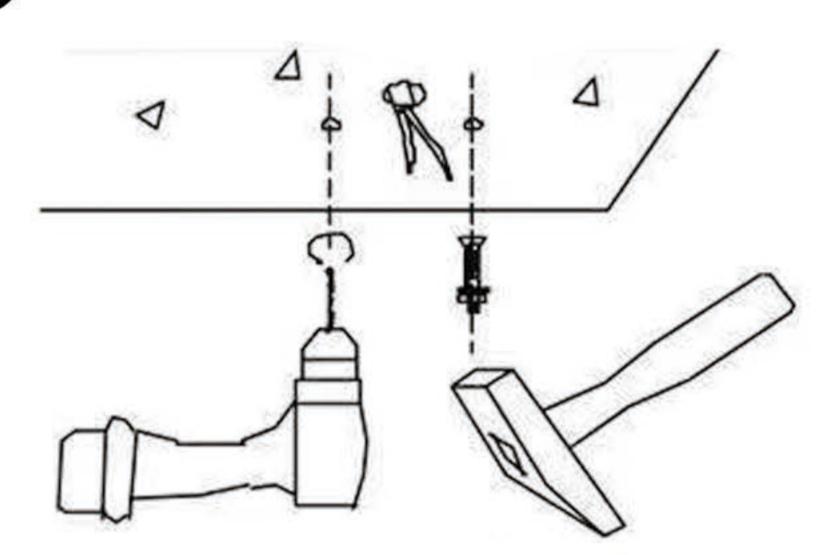


3. Drill on the wall and hammer expansion anchors into the wall.

4. Attach the mounting bracket onto the wall with screws.



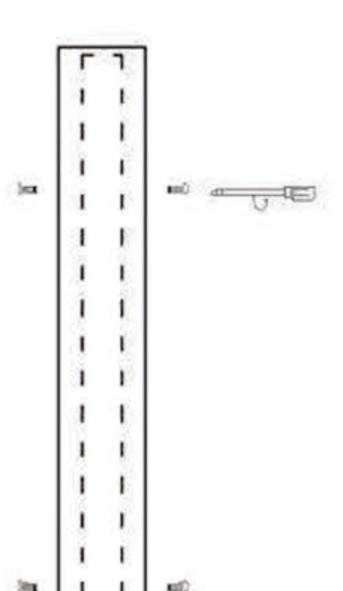

5. Attach the light body to the mounting bracket with screws.

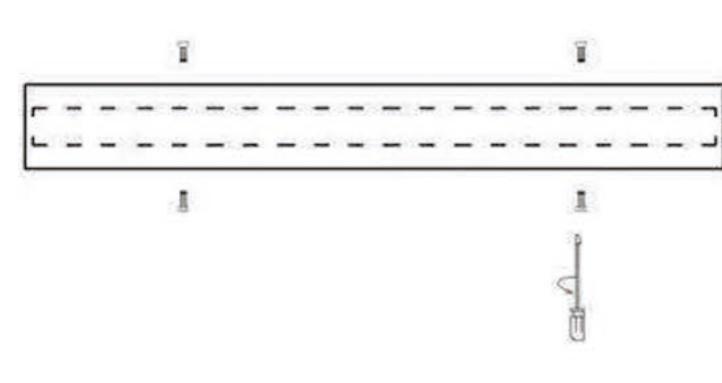

wowohlighting.com

support@wowohlighting.com