


INSTALLATION GUIDE - WW1039

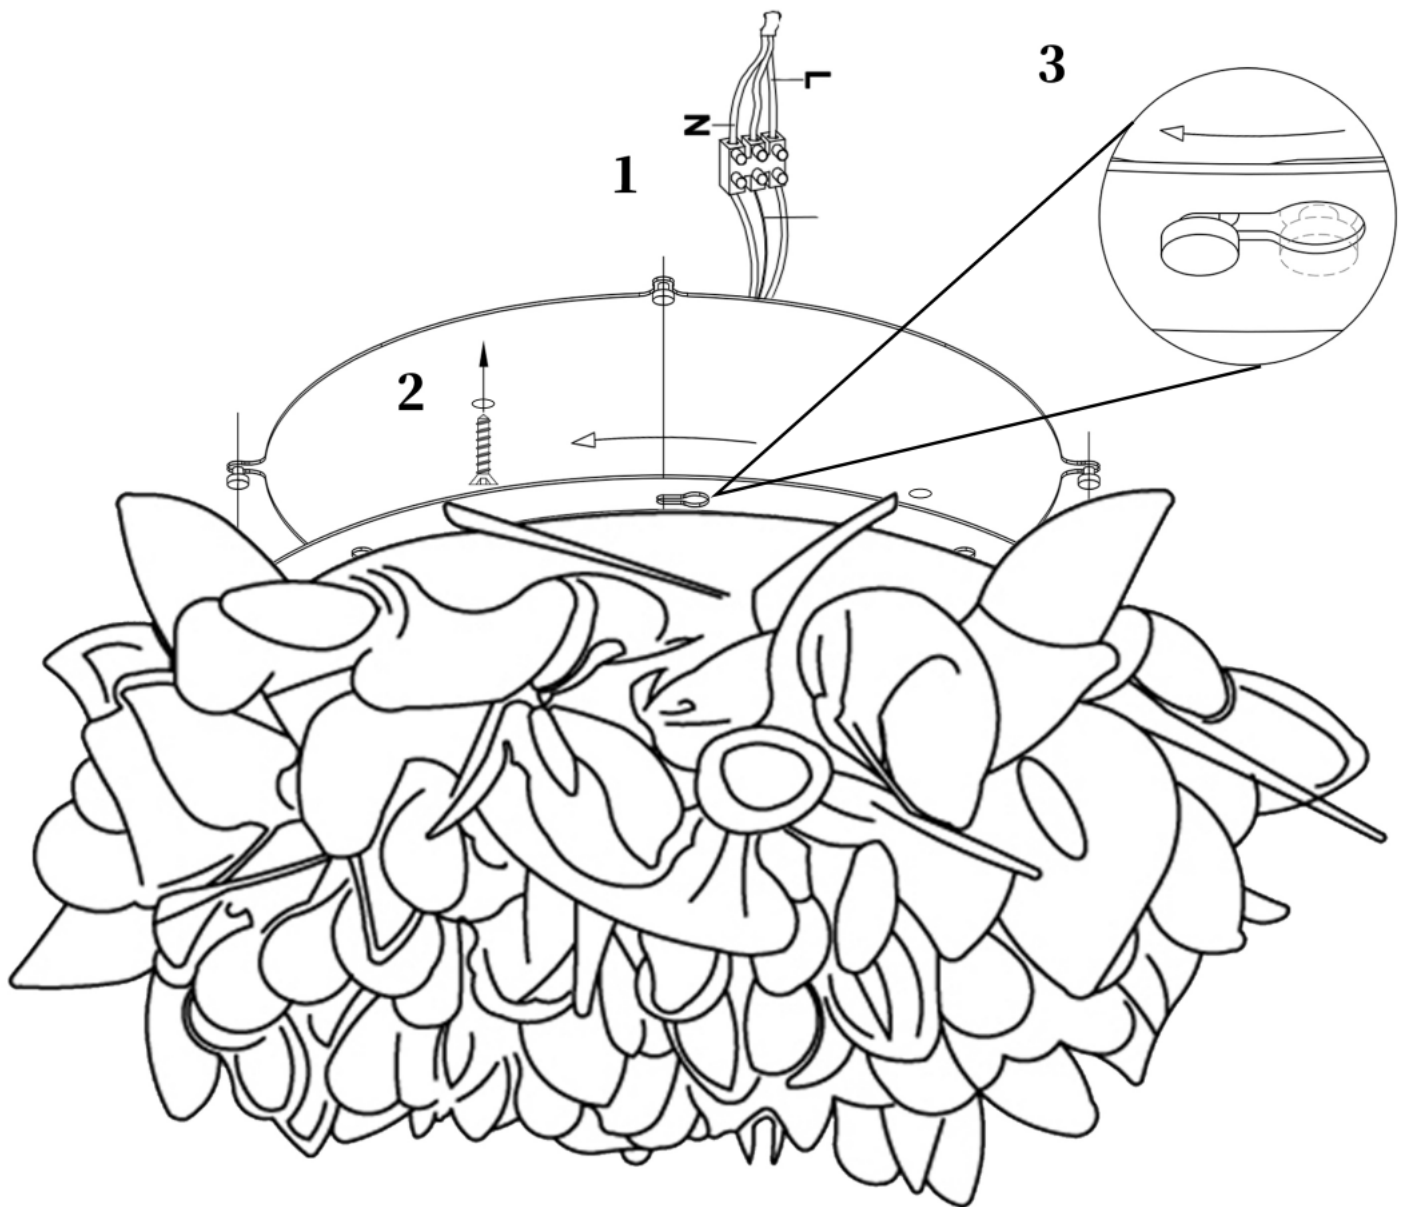

1. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
2. Drill the mounting bracket into the ceiling with screws and wedge anchors (these come with the light), the mounting bracket integrated with led panel.
3. Align holes of the canopy with ears of the mounting bracket and turn round to secure the canopy.
4. Turn the power back on and flip on the light switch to test your light.