


INSTALLATION GUIDE - WW2524

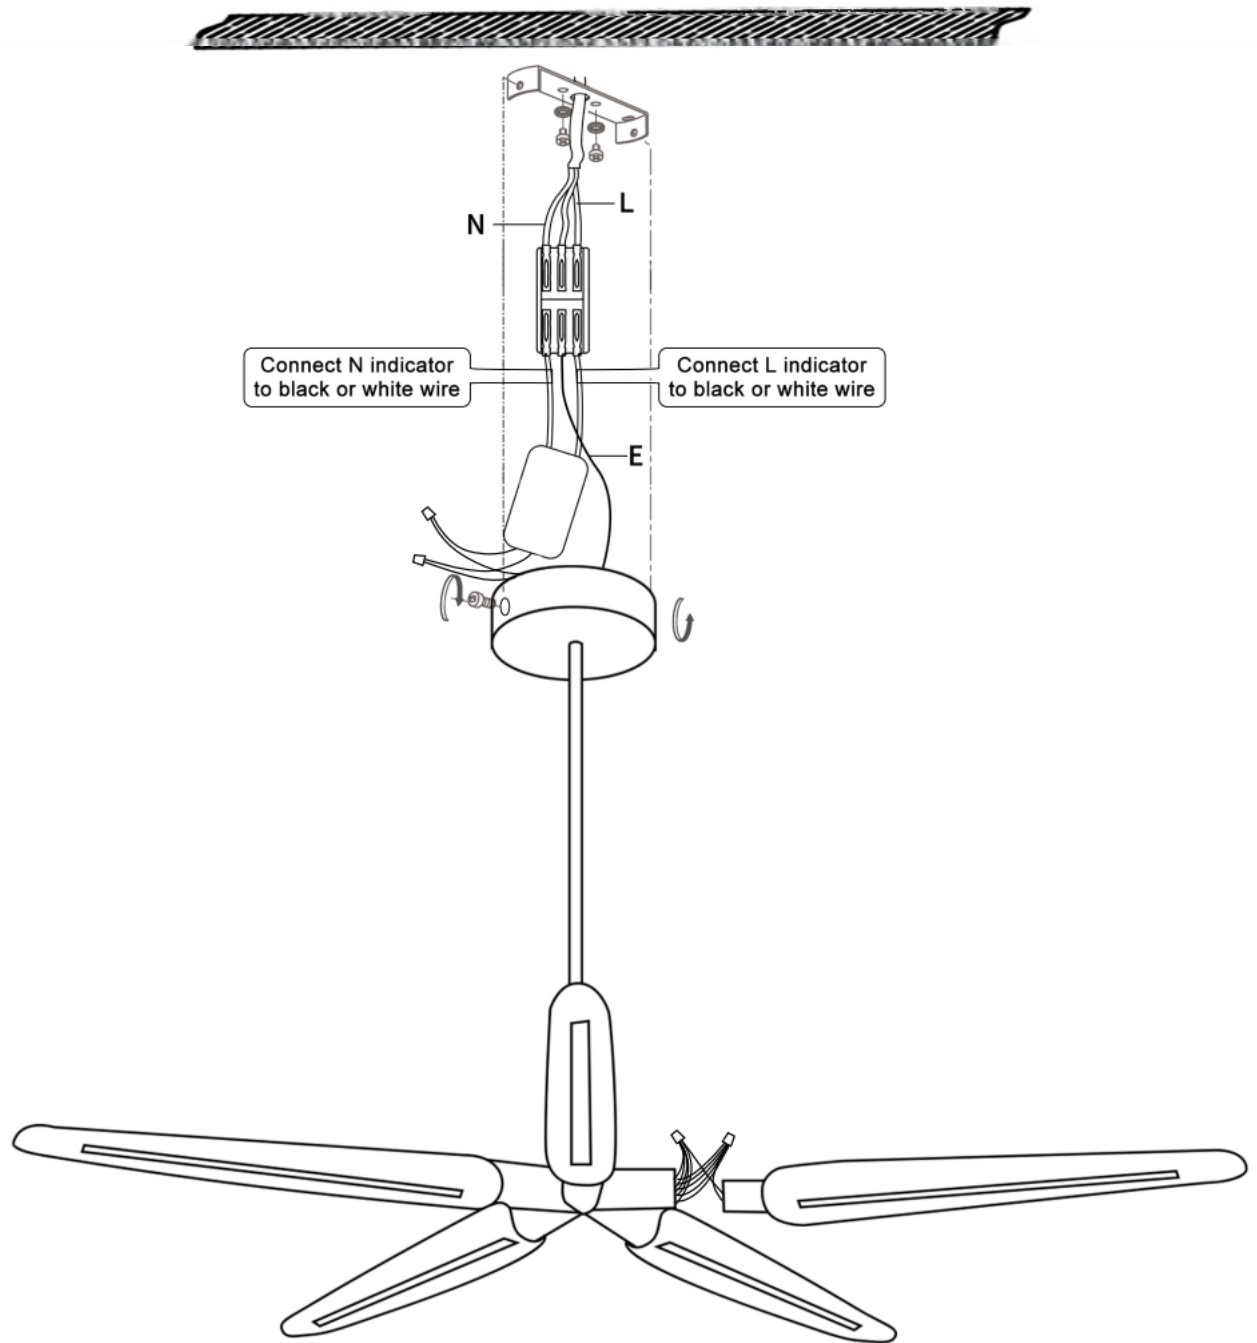

1. Drill the mounting bracket into the ceiling with screws and even anchors (these come with the light).
2. Insert all wood arms to the metal socket cluster and pull wires out of one of sockets.
3. Use the wire cap nuts to connect the wires to the cable tagged in same colors.
4. Pass the tagged cable through the boom, and screw the boom onto the socket cluster and canopy with a finger nut.
5. Use the wire cap nuts to connect the driver to the tagged cable and the supply wires interchangeably without considering labels.
6. Align the canopy holes with the mounting bracket and secure the canopy with screws.